


INSTALLATION INSTRUCTIONS CZ 75 SP01, SHADOW, PHANTOM, ORANGE WITH USER ADJUSTABILITY


1. Insert one External spring on the Recoil Rod and place it into the slide (Fig. 1).




2. Continue pushing the Recoil Rod from the back side (Fig. 2).

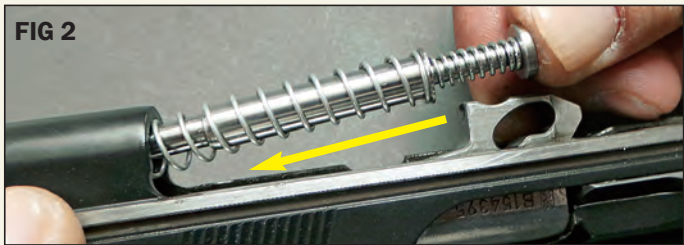


3. Finally push the Recoil Rod, until the front side passes through the slide hole and press down to lock the back side of the rod on the barrel link (Fig. 3).

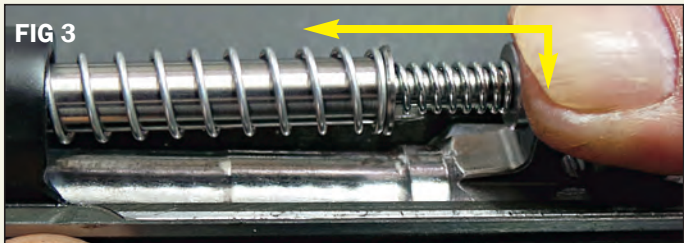

4. To remove the Recoil Rod, push it back and up, to be ready for the next step (Fig. 4).

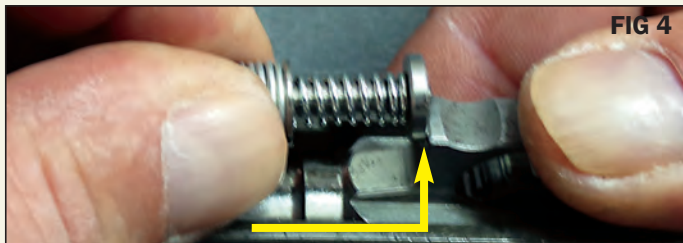

5. Push simultaneously back and forth to compress the Recoil Rod and pull it up to release it from the barrel link (Fig. 5).

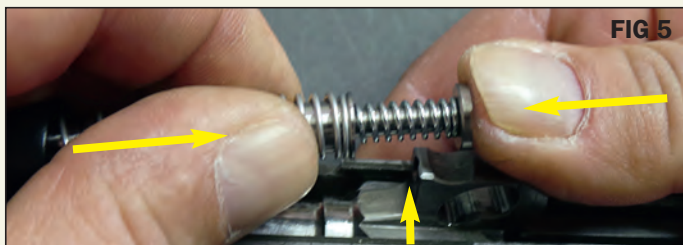

ADJUSTABILITY INSTRUCTIONS

Use always one of the three different length Buffer Tubes (Fig.6) to adjust the total force of the Recoil System (slide full open position).

TUBE FORCE


S=Short tube 8kg-15lbs

M=Med tube 9.5kg-19lbs

L=Long tube 11kg-23lbs



Insert one buffer tube of your choice on the Recoil Rod and push it until it stops on the bottom flange (Fig. 7,8).

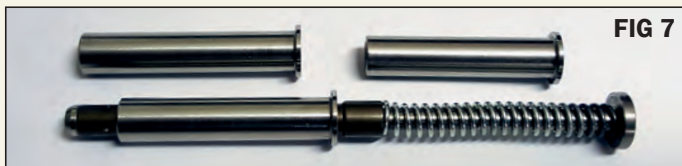

The DPM Recoil Rod includes four external springs. The two long springs have wire diameter 0.9mm (soft slide function). The two short springs have wire diameter 1.0 mm (hard slide function) (Fig. 9).

SPRING FORCE (Slide on the battery)

S1	21.5 coils	2.6kg-5.73lbs
S2	23.5 coils	3.0kg-6.61lbs
S3	25.5 coils	3.3kg-7.3lbs
S4	27 coils	3.8kg-8.4lbs

